



# Samsung Galaxy S6 Front Facing Camera Replacement

Replace the front-facing camera on your Samsung Galaxy S6.

Written By: Dante Mazzanti



## INTRODUCTION

If your selfies are coming out badly, you may have a broken front-facing camera. Follow this guide to replace the front-facing camera on a Samsung Galaxy S6.

This guide involves removing the rear glass. Removing the rear glass destroys the adhesive holding it in place. Follow [this guide](#) to reinstall the rear glass.



### TOOLS:

- [SIM Card Eject Tool](#) (1)
- [iFixit Opening Tools](#) (1)
- [iFixit Opening Picks set of 6](#) (1)
- [Spudger](#) (1)
- [Heavy-Duty Suction Cups \(Pair\)](#) (1)
- [iOpener](#) (1)
- [Phillips #00 Screwdriver](#) (1)
- [Tweezers](#) (1)



### PARTS:

- [Galaxy S6 Front Camera](#) (1)

## Step 1 — SIM Card



- Insert a paper clip or SIM eject tool into the hole in the SIM card slot on the power button side of the phone.
  - Press to eject the SIM card tray.
- ⚠ Don't press too hard or you may damage the SIM card tray.

## Step 2



- Remove the SIM card tray from the phone.

## Step 3 — iOpener Heating



- ⓘ We recommend that you clean your microwave before proceeding, as any nasty gunk on the bottom may end up stuck to the iOpener.
- Place the iOpener in the center of the microwave.
- ⚠ For carousel microwaves: Make sure the plate spins freely. If your iOpener gets stuck, it may overheat and burn.

## Step 4



- Heat the iOpener for **thirty seconds**.
- Throughout the repair procedure, as the iOpener cools, reheat it in the microwave for an additional thirty seconds at a time.

- ⚠ Be careful not to overheat the iOpener during the repair. Overheating may cause the iOpener to burst.
- ⚠ Never touch the iOpener if it appears swollen.
- ⚠ If the iOpener is still too hot in the middle to touch, continue using it while waiting for it to cool down some more before reheating. A properly heated iOpener should stay warm for up to 10 minutes.



## Step 5



- Remove the iOpener from the microwave, holding it by one of the two flat ends to avoid the hot center.
- ⚠ The iOpener will be very hot, so be careful when handling it. Use an oven mitt if necessary.

## Step 6 — Rear Glass



- ⓘ Place the phone facedown.
- ⓘ If your glass is shattered, put packing tape over the entire panel to hold it together during the removal process.
- Lay the iOpener over the panel for about 60 seconds to loosen the adhesive around the edge of the glass.
- Shift the iOpener to heat the remaining section of the panel for another 60 seconds.

## Step 7



- Attach a heavy-duty suction cup to the lower half of the rear glass panel.
- Secure the suction cup by raising the hinged handle and flipping the latch to clamp both handles in place.


## Step 8



- ⓘ The following steps involve using an opening pick to separate the rear panel from the midframe. If the adhesive is too strong, reapply heat with the iOpener.
- Using the suction cup, apply pressure to the middle section of the panel while pulling up the lower edge by pivoting your wrist.



## Step 9

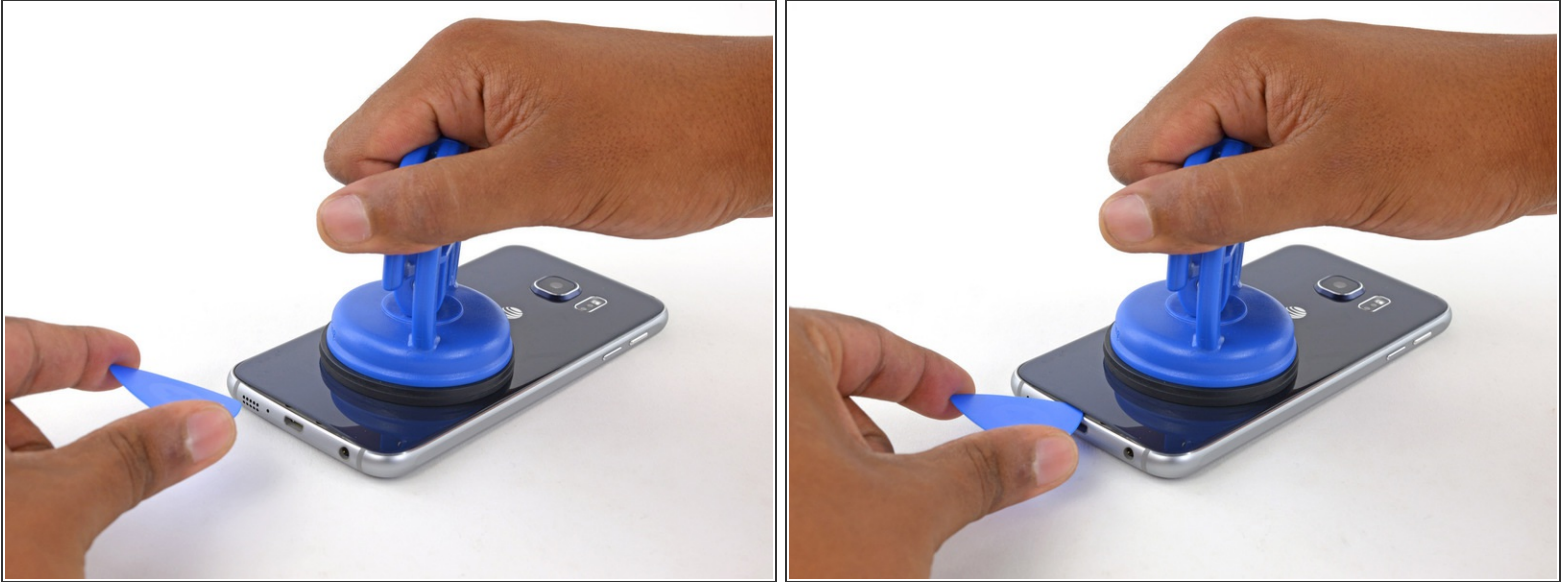

- Once you've opened a large enough gap, insert an opening pick between the rear glass and the midframe.

## Step 10



- Slide the opening pick around the bottom left corner of the rear glass panel.

## Step 11



- Slide the pick along the power button side of the phone.

## Step 12



- Slide the opening pick across the top of the phone.

## Step 13



- Slide the opening pick down along the volume buttons side of the phone.

## Step 14



- Pull up on the rear glass panel while holding down the midframe to separate the components.
- ❗ If you encounter too much resistance from the adhesive, slide the opening pick under the glass a few more times.



## Step 15




- Insert an opening pick between the rear panel and the midframe.
- Slide the pick along the top of the phone to loosen the remaining adhesive.
- Twist the pick to separate the two pieces.

## Step 16



- i** At this point, the rear glass panel should be fully separated from the body of the phone, although the adhesive strip may be attached to both sides.
- Pull the rear panel up and away to completely separate it.
- ★** Follow [this guide](#) to reinstall the rear glass.

## Step 17 — Midframe Assembly

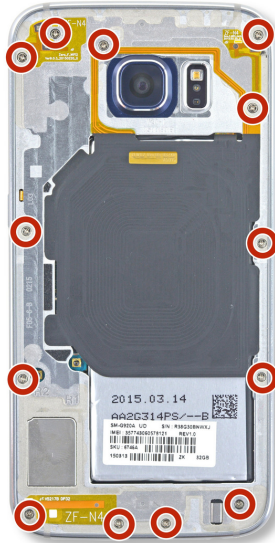

- Remove the thirteen 3.5mm Phillips #00 screws securing the midframe to the phone.

## Step 18



- Firmly grasp the edge of the midframe assembly.
- Lift up on the midframe assembly while pushing down on the battery to separate the midframe assembly from the rest of the phone.





## Step 19




- Lift the midframe assembly up to separate it from the rest of the phone.

## Step 20 — Battery Connector

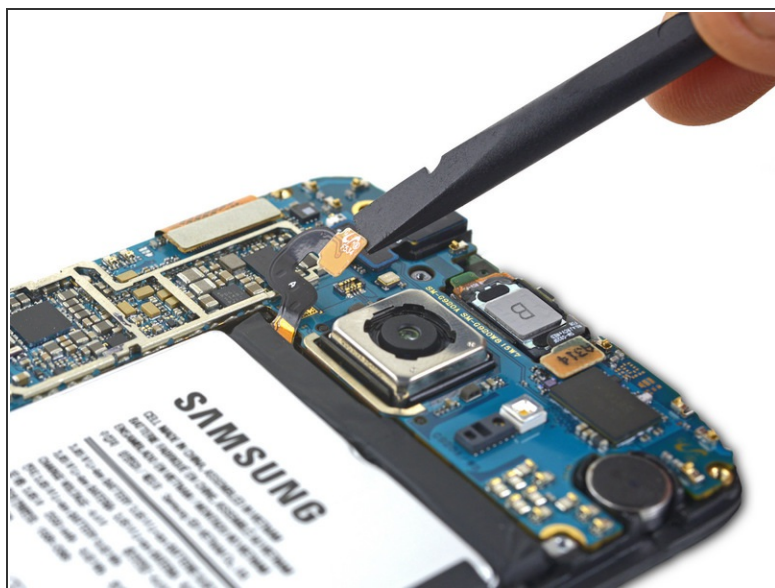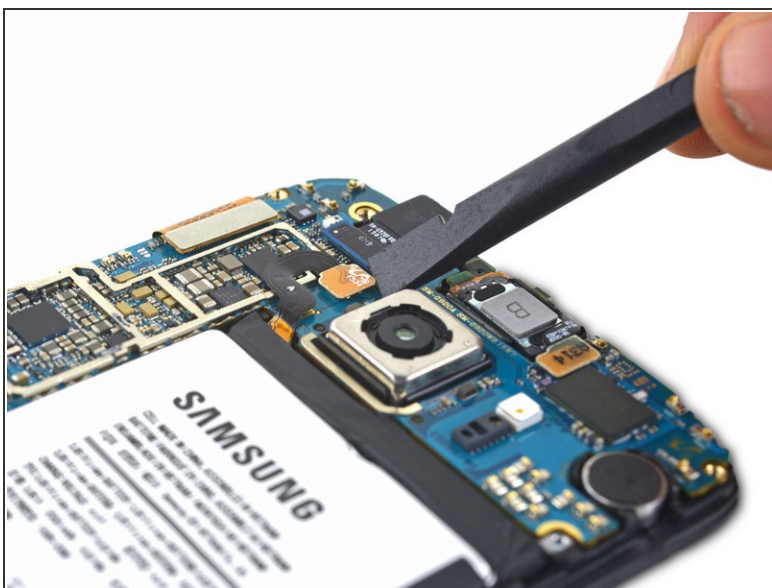

- Use the flat end of the spudger to disconnect the battery connector from its socket on the motherboard.

## Step 21 — Front Facing Camera

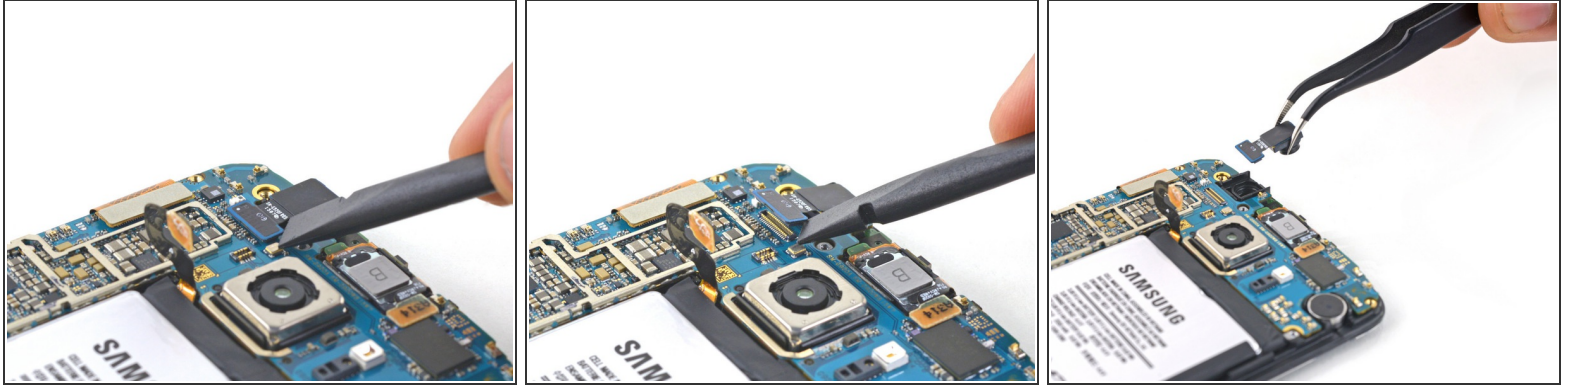

- Use the flat end of a spudger to pry up and disconnect the front-facing camera from the motherboard.
- Remove the front-facing camera.

To reassemble your device, follow these instructions in reverse order. When reinstalling the rear glass, refer to the [rear glass adhesive replacement guide](#).

This document was last generated on 2017-11-12 02:11:22 PM.